

# ELECTROMAGNETIC DOOR HOLDER DH-1224 (12/24 VOLT)

## User Manual

### Application:

Fire Door or Escape Door

### Normal Operation Method:

To ensure the door is held properly by the door holder, the door with armature must be pressed slightly against it.

### During Emergency

- Security system will automatically cut off the power supply to the door holder or ;
- Press the red button to release the door.

### Testing

Manually press the red button on the top of the door holder to ensure the automatic door closing mechanism is working. Releasing the red button will recover the holding function.

### Current Rating


12 Volt - 100 mA

24 Volt - 50mA

### Connections

Terminal - Max 2.00mm wire cable

## Wiring Instructions

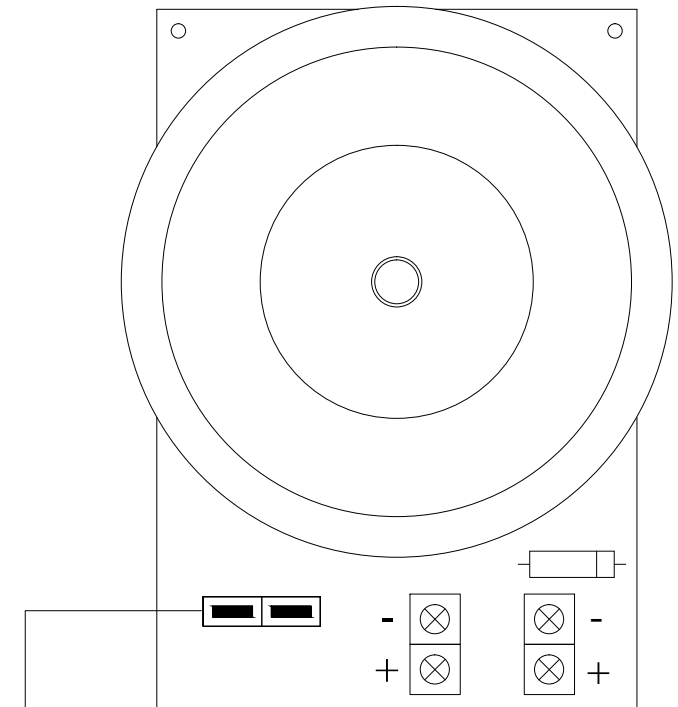

### Important

Before power supply is switched on, set the power selector jumper correctly.

 12VDC

 24VDC