

# EMERGENCY DOOR RELEASE INSTRUCTION MANUAL

## Surface Mounting

Two fixing screws must be used to attach the bottom cover to the wall surface. Ensure that the screws are horizontally aligned. This door release unit is suitable for indoor application.

## Testing

Push the key through the bottom side hole for testing micro switching function. Pulling it out will reset the glass.

## Normal Operation Method

Break the glass to operate the door release.

## Glass Replacement

Open front cover, remove broken glass, replace a new one and follow the procedure of testing.

## Current Rating

12/24V.DC 10A; 48V.DC 3A; 250V.AC 10A

## Connections

Terminal-Max 2.0mm<sup>2</sup> cable

## **E-108 E Wiring Configuration**

Single Pole Double Throw (S.P.D.T)

Figure 1: Normally Open Wire Configuration

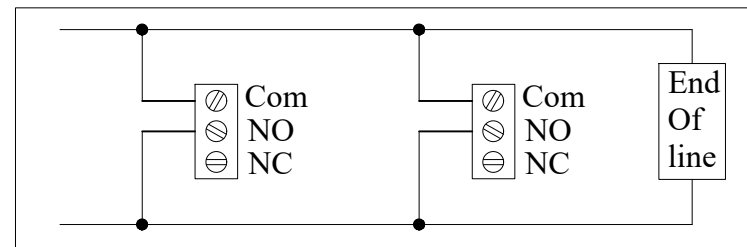


Figure 2: Normally Close Wire Configuration

