




EMERGENCY DOOR RELEASE


Spec Model	EDR819L-2	EDR819L-3	EDR819-1	EDR819-2	EDR819-3
Output Point (C,NC,NO)	2 Outputs	3 Outputs	1 Output	2 Outputs	3 Outputs
Voltage Input	12Vdc / 24Vdc (±5%)		N/A		
Current Draw (Standby)	8mA (±5%)		N/A		
Current Draw (Alarmed)	20mA (±5%)		N/A		
Built-In Buzzer	Interval wailing max.60dB		N/A		
Status Indicator	GREEN (Standby) / RED (Alarmed)		GREEN (Standby) / RED (Alarmed)		
LED Indicator	GREEN (Standby) / RED (Alarmed)		N/A		
Max Current Rating	125Vac / 3A		125Vac / 2A		
Weight	135g (±2%)		135g (±2%)		
Dimension	(L)86 x (W)86 x (T)42 (mm)		(L)86 x (W)86 x (T)42 (mm)		
Material	ABS; PC (Transparent Part)		ABS; PC (Transparent Part)		
Terminal Connector	Max. 2.0mm ² Cable		Max. 2.0mm ² Cable		




Features

- 1. Resettable design.
- 2. Built-in buzzer alarm. (Only for model EDR819L)
- Lock hole for authorize personnel usage. 3.
- 4. Universal key design to reset, test or install easily.
- 5. Status indicator Green or Red on the front.
- 6. LED indicator for easily exit in dark environment. (Only for model EDR819L)
- 7. High grade components with good quality guarantee.
- 8. Embedded or surface mounting options.
- 9. Available in color: Green or Blue
- 10. Easy to assemble, clip on design between casing, simple & fast installation & maintenance.

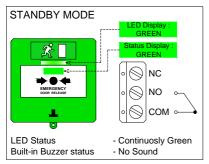


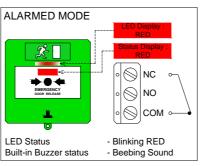

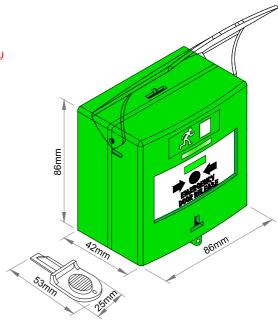

Note: LED display & buzzer are only applicable for model EDR819L

Basic Wiring Diagram Concept

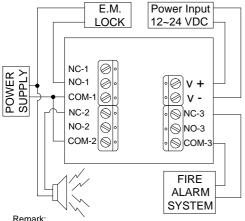

- Diagram above shown for 3 outputs model.
- Model 1 output mean only have 1NC, 1NO & 1COM terminal connection.
- Power input are available only for model EDR819L.

Fixed holes embedded box at 60mm distance. JΖ Important Notice: \[\sum_{\text{N}} \]

- Disassemble top case & middle case is for embedded mounting purpose. Please do not disassemble if not necessary.


- Press the trigger plate to turn the status to Red before detach the Top and Middle case, this step precaution is to prevent the loaded spring inside from popping out.

Disclaimer:

EBELCO reserve the right to go ahead with any modifications of models or features or price without fore warning. All the information and specifications stated in this document are current at the time of publication.


GENERAL INSTALLATION GUIDE

Surface Mount Instruction

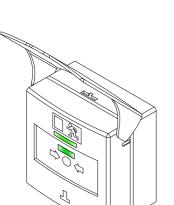


Complete Case & Cover


1. Use Key to disassemble Bottom Case & Middle Case.

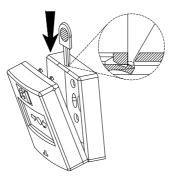


3. Buckle in the middle case to the bottom case clipping as shown in the diagram

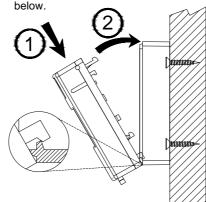

Mount the Bottom Case on the wall and connect the wires to the PCB output terminal.

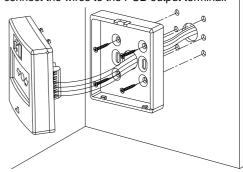


4. Insert the Key to reset the status indicator back to Green. Then pull out the Key.

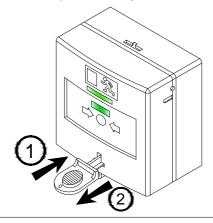

Embedded Mount Instruction


1 Use Key to disassemble Bottom Case & Middle Case.

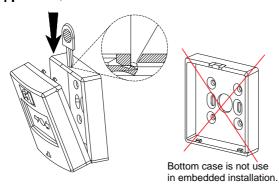

2. Use Key to disassemble Top case & Middle Case.




** See Important Notice.

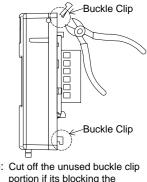


Note: Cut off the unused buckle clip portion if its blocking the embedded surface mounting.


3. Connect all the wires to the PCB output point, then mount the middle case onto the embedded box with screw *.

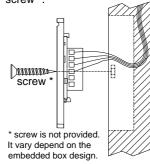

4. Buckle up the clip between Top case & Middle case as shown in the diagram below.

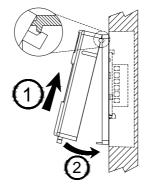

5. Insert the Key to reset the status indicator back to Green. Then pull out the Key.

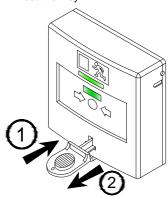

Copyright © EBELCO Industries Sdn. Bhd. All Right Reserved. EISB-EDR-IG Ver.A Publish: 16.1.2020

Lateral View