
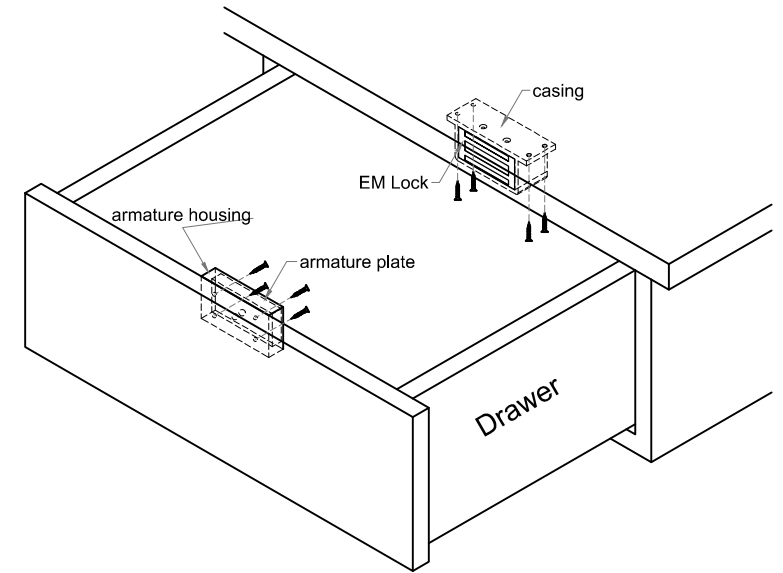


CABINET LOCK (EM100S) INSTALLATION INSTRUCTION

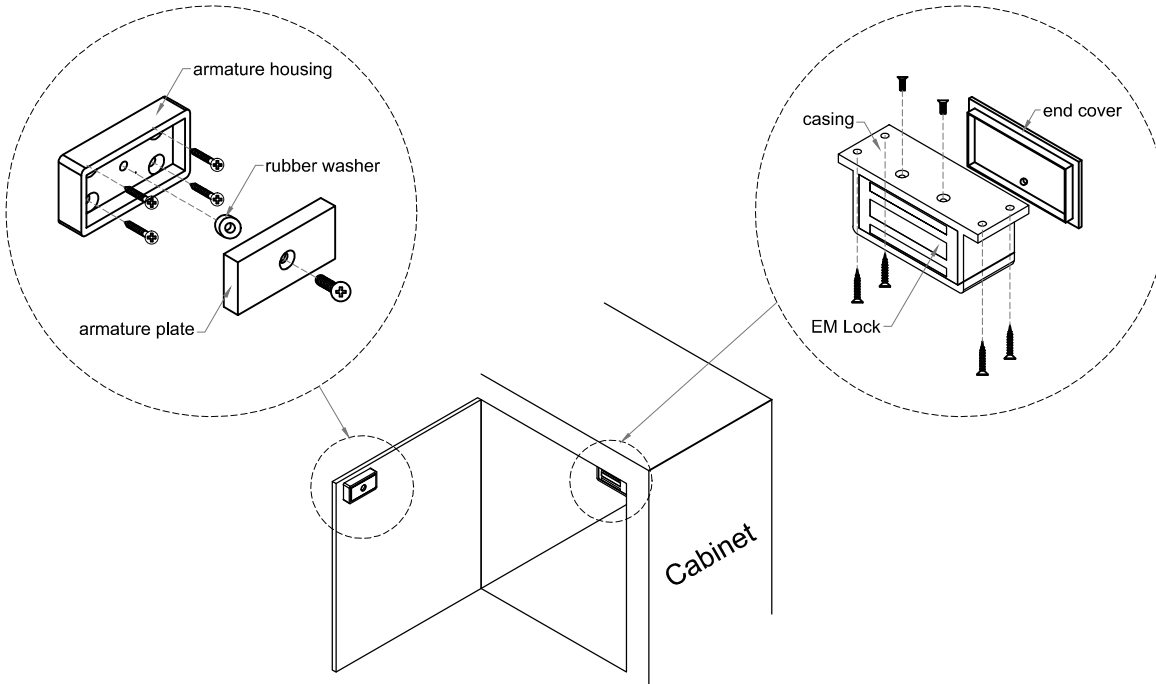


SPECIFICATION:

Current Draw : 12V, 100mA ;
24V, 50mA

Holding Force : Up to 120lbs (54kg)

Factory Setting : 12VDC

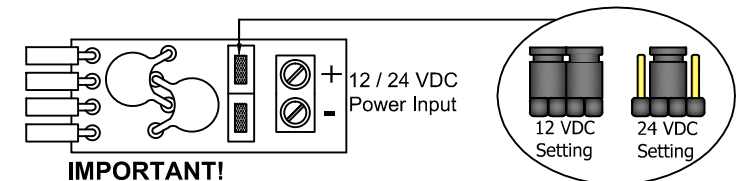

IMPORTANT!

Set the jumper position according to the power input correctly before switch ON the power.

- 1) Install the armature plate housing by using the four #6 x 3/4" philip flat head self-tapping screws. Fixed the armature plate and rubber washer into housing with screw provided.
- 2) Insert the EM lock into the casing and fixed with screw provided. Place the end cover into back casing. Mark the mounting hole and install the plastic casing by using #6 x 3/4" philip flat head self-tapping screws.
- 3) Close and latch the door. Verify that the lock face and armature are making full contact.
- 4) It is recommended that to apply a light coat of silicon lubricant to the mating surface on a monthly basis to prevent rust.